

# i.CAM-xC




- >3x10-BIT DYNAMIC ◀
- 15Hz FRAME RATE ◀
- 0.8 MEGAPIXEL, 1/3" ◀
- RGB CCD IMAGE SENSOR ◀
- FIREWIRE-INTERFACE ◀
- EXTERNAL TIMING ◀
- MULTI CAM OPERATION ◀
- NOTEBOOK COMPATIBLE ◀
- PELTIER COOLING ◀




The i.Cam-xC is a high resolution colour-camera system with >3x10-bit dynamic, designed for various industrial and scientific applications with frame rates up to 15Hz. Because of the hot-plug compatible FireWire HighSpeed Interface, it is very simple to connect the i.Cam-xC to any computer which provides a standard OHCI IEEE1394 compatible interface (single-cable-connection). In particular, this offers the possibility of using a notebook as a very flexible and transportable image processing system. Multiple camera systems can operate completely asynchronously with only one PC. All camera functions, e.g. amplification, exposure timing and automatic functions can be adjusted through the software.

Features	
<b>High Sensitivity</b> ▶	High signal to noise ratio with a noise of $10e^{-}$ /pixel/s for each of the RGB-colour ranges, optimal for spectral/colour analysis at difficult lighting conditions.
<b>&gt;3x10-bit Dynamic</b> ▶	10-bit digitalization with a S/N of 0.9 counts rms, actually provides a >3x10-bit dynamic, easily leaving some 12-bit cameras behind.
<b>Optional Peltier Cooling</b> ▶	The thermoelectric peltier cooling device stabilizes the temperature of the image sensor at 15°C. The Dark current is cut down to 1/5, therefore 5 times longer integration times are possible.
<b>Photometric Linearity</b> ▶	Proportionality of measured counts to incoming light intensity better than 2%, can be optimized to linearities <0.5% with correction tables.
<b>Anti-Blooming Function</b> ▶	Blooming from one overexposed pixel to adjacent pixels will be avoided by an efficiency of an overexposure factor of > 200 relative to the full well capacity. (typ. 1000x)
<b>External Timing</b> ▶	Asynchronous electronic integration time control by an external gate input. Shutter times down to 66 $\mu$ s and long time integration up to 40s.
<b>15Hz Frame Rate</b> ▶	For optimal adjustment opportunities there is the possibility of live high res. image series (software supported) due to the frame rate of 15Hz.
<b>Multi Camera Operation</b> ▶	Use up to 4 completely asynchronously working cameras (each with a frame rate of 15Hz) at one dual-OHCI IEEE 1394 Interface board in one single PC.
<b>FireWire Interface</b> ▶	Single-Cable-Connection with 400-Mbits/s due to FireWire-HighSpeed Interface. Compatible with every standard OHCI IEEE 1394 interface. Works easily with notebooks.
<b>WinSIS-Software</b> ▶	WinSISlight for standard, WinSIS6 with WinXP/2000/NT/9x for complex measurement-applications controls all camera functions and integration timing. The very user-friendly and intuitive handling, the unique opportunity of macro-recording (WinSIS6 only) and of course the very simple project creation, offer a fast realization of complex applications without long training periods. SDK for personal programming.

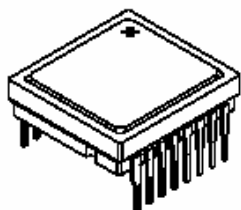


CCD Image Sensor  
Sony ICX204AK

Specifications	
CCD Image Sensor	Sony ICX204AK
Sensor Type	Progressive Scan, inter-line transfer, Bayer-RGB-Filter, Lens on chip
Sensor Format	4 : 3; 1/3" Image Sensor
Image Size	4.76mm x 3.57mm, 5.95mm diagonal
Pixel Size	4.65µm x 4.65µm
Pixel	1024 (H) x 768 (V)
Electron Capacity	12,000e <sup>-</sup>
Readout Noise, rms	10e <sup>-</sup>
Dynamic	3 x 1,200 : 1
Dark Current @ 20°	< 3e <sup>-</sup> / pixel / s
Quantum Efficiency	> 30%
Anti-Blooming	1000 x e <sup>-</sup> capacity
Digitalization	10-bit, 1024 grayscales, 12e <sup>-</sup> / grayscale
Frame Rate	15 Hz, full high resolution
Integration Time	66µs to 40s
Amplification	1 – 32 (software)
Optical Mount	c-mount, cs-mount
Mech. Dim. (WxHxD)	72mm x 64mm x 26mm
Weight	220g
Operational Temperature	+5 ... +40°C

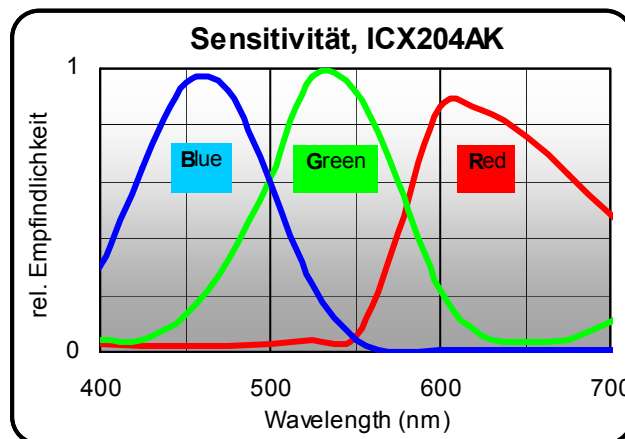

Relative spektrale Sensitivität der einzelnen RGB-Bildelemente.

Configuration pattern of the Bayer-RGB-Filter of each pixel.

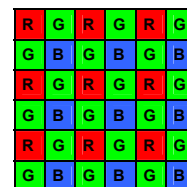

Software colormangement offers the possibility of flexible user related evaluation according to different processes.

### Please call for accessories, e.g.:

- ⇒ Lenses – Cosmocar, Schneider, etc.
- ⇒ Filters, Adapters, Microscope accessories
- ⇒ LED-lighting – DC, pulsed (up from 50ns)
- ⇒ Falsh-lighting – up from 3 µs, <1% stability
- ⇒ Imageintensifiers, gateable >3ns
- ⇒ SPI Single-photon-detectors

### B/W-version ⇒ i.Cam-vM

Our product range covers more than 15 different types of camera systems, especially Scientific Imaging Systemes (SIS) with up to 6 Megapixels and 16-bit Dynamic.

## THETA SYSTEM Elektronik GmbH

Rathausstraße 13  
D-82194 Gröbenzell  
Tel +49 (0)8142-4678 0  
Fax +49 (0)8142-4678 90  
info@theta-system.de  
www.theta-system.de